

### Device Overview


- 1 USB port (under weather cap)
- 2 Buttons
- 3 SOS button (under protective cap)
- 4 Power button

### Sending a Quick Message

**Tip:** Manage up to 20 Quick Messages in the Hub at the device or team folder.

1. From the **clock screen**, press **OK** (Messages).
2. Press **←**, then **OK** (New Message).
3. Select a contact, then press **OK** (Select Quick Text).
4. Use **←** or **→** to scroll and select a Quick Text.
5. Press **OK** (Yes) to send the message.

**Note:** After saving changes in the Hub, complete a **USB sync** to apply message configuration updates to your device.

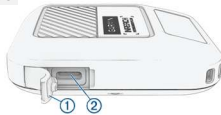

### Sending a Preset Message

1. From the **clock screen** (Main Menu), press **OK** > **OK** (Check-In).
2. Use the **←** or **→** buttons to scroll through the available messages.
3. Press **OK** (Send) to send your message.

**i** Preset Messages are preloaded, one-touch messages sent to assigned contacts.

### Registering Your Device with the EVERYWHERE App

**Tip:** If you weren't provided with a Configuration Key, try entering your email. If you don't receive an email, contact your Hub User administrator or EVERYWHERE Support to have your email assigned and complete your registration.

#### REGISTRATION STEPS

1. **Download & Install:** Get the EVERYWHERE App from the [App Store](#) or [Google Play Store](#).
2. **Accept the Terms:** Review and accept the End User License Agreement.
3. **Enter Configuration Key:** Input your unique key.
4. **Message History Prompt:** When asked, select "No", unless you're restoring messages.
5. **Enable Permissions:** Allow access to Location, Bluetooth, Notifications, and Contacts (optional).
6. **Bluetooth Pairing:** Tap "Yes" to pair with your device now, or "No" to set it up later.

**Note:** Bluetooth pairing may require extra steps on the device.

### Buttons

- Left Arrow:** Press to scroll through menus, options, and settings. Press and hold to return to the home page.
- Right Arrow:** Press to scroll through menus, options, and settings.
- OK:** Press to choose an option or to acknowledge a message. From the home page, press to open home page actions.
- Power:** Press to turn the device on. Press to open the power menu. Press and hold to turn the device off.



### Status Icons

- Up Arrow:** Transmitting data
- Location Pin:** Tracking enabled
- Speech Bubble:** Unread messages
- Muted Speaker:** Sounds muted
- Battery:** Charging battery
- Star:** Approaching min. operating temp.
- Thermometer:** Approaching max. operating temp.

### Testing Your Signal

**Tip:** Before heading out, make sure your device is functioning properly and your satellite service is active.

#### DEVICE STEPS

1. From the **clock screen** (Main Menu), press: **←** > **OK** (Service Plan) > **OK** (Test Service) > **OK** > **OK** (Begin Test).
2. Ensure the device has a **clear view of the sky**.
3. Wait for "Test Successful" (✓) to appear.

### USB Syncing the Device

**Tip:** A USB sync ensures that **Contacts**, **Preset Messages**, **Quick Messages** set in the EVERYWHERE Hub (at the device or team folder level) will appear on your device, along with other user contacts from your team. For **App Users**, Contacts simply update over the air.

#### SYNC STEPS

1. **Download the device configuration file:** Get it from the Hub (if you have access), or request it from your Hub User administrator or EVERYWHERE Support.
2. **Connect your inReach Messenger:** Use the Garmin USB-C data cable to connect to your computer.
3. **Transfer the file:** Drag and drop the configuration file into the root folder of the device.
4. **Eject and restart:** Safely eject the device, restart it, and follow on-screen prompts to apply changes.

### Activating Your Transferred Device

**Tip:** If your device was purchased directly from EVERYWHERE, you can skip these steps.

#### 1. PERFORM A FACTORY RESET

- From the **clock screen** (Main Menu), press **←** > **OK** (Settings) > **←** > **OK** (System) > **←** > **OK** (Reset) > **→** > **OK** (Delete Data and Reset Settings).
- Press **OK**, then **→** > **OK** (Continue).

#### 2. ACTIVATE THE DEVICE (Requires a clear view of the sky)

- Turn on the device > press **OK** (Select Language) > choose your language.
- When prompted with "To get started...", press: **→** > **OK** (Ignore it) > **OK** (Skip) > **OK** > **→** > **OK** (Yes) > **OK** (Activate Now) > **→** > **OK**.
- Wait up to 20 minutes for the screen to display "Activation Complete".

#### 3. ENABLE AUTO TRACK

- From the **clock screen** (Main Menu), press **←** > **OK** (Settings) > **OK** (Tracking).
- Press **→**, then ensure **Auto Track** is **On**.

**Note:** Ignore prompts to download the Garmin Messenger app. It must **not** be installed to pair your device with the EVERYWHERE App.

### Pairing the EVERYWHERE App with Your Device

#### ON THE DEVICE

1. From the **clock screen** (Main Menu), press: **←** > **OK** (Settings) > **→** > **OK** (Phone).
2. Verify **Bluetooth Status** shows **On** > **→** > **OK** (Pair Device).



#### ON THE APP

1. Tap **Settings** > **Bluetooth Pairing and Status** > tap **Pair**.
2. Find the **Pairing Code** matching your device > tap the circle to **select the device** > **OK**.
3. Verify Bluetooth is shown as "Connected" at the top-left of the App status bar.

**Note:** Always ignore any prompts to download Garmin apps.

### Activating & Cancelling an SOS

#### DECLARING AN SOS

1. **Lift** the protective cap from the SOS button.
2. **Press and hold** the SOS button to start the countdown.
3. **Wait** for the device to send an SOS message with your location to **Garmin Response** (emergency response service).
4. **Confirm** receipt of the message by **issuing a reply** (Rescue will proceed even if no reply is received).

#### CANCELLING AN SOS

1. **Press and hold** the SOS button to begin cancellation.
2. **Select "Yes"** to confirm.
3. **Wait** for a confirmation message from **Garmin Response**.

**Note:** Once confirmed, the device returns to normal operation.

**Do not press the SOS button to test it.**

